

6862-3381 Chrome Laundry Center ©2010 Whitmor



A 8 ea
Long wide pole (28.5")



B 2 ea
Vertical front pole



C 2 ea
Lower horizontal side pole



D 2 ea
Upper horizontal side poles



 
E 4 ea
Vertical pole with push button



F 2 ea
Vertical upper short pole



G 2 ea
Vertical upper long pole



H 5 ea
Long thin shelf pole (30")



I 1 ea
Hanging pole (29.75")

Assembly Time:
Less than 30 minutes.



J 4 ea
Bottom corner connector
(small hole in bottom
for wheel)



K 4 ea
Middle corner connector



 
L 2 ea
Top shelf connector



M 2 ea
Wheel



N 2 ea
Wheel with lock



O 6 ea

Bag hanger




P 3 ea
Laundry bag


This product's intended use
is for hanging and sorting
garments and laundry.

Tools Needed: No tools required.


STEP 1. Assemble the bottom section by inserting two long wide poles (A) and lower horizontal side poles (C) into bottom corner connectors (J). Insert two long wide poles (A) and two vertical front poles (B) into top of bottom corner connectors (J). Insert two long wide poles (A) and upper horizontal side poles (D) into middle corner connectors (K). Place this assembled section onto top of vertical poles (A & B) and press down until seated.

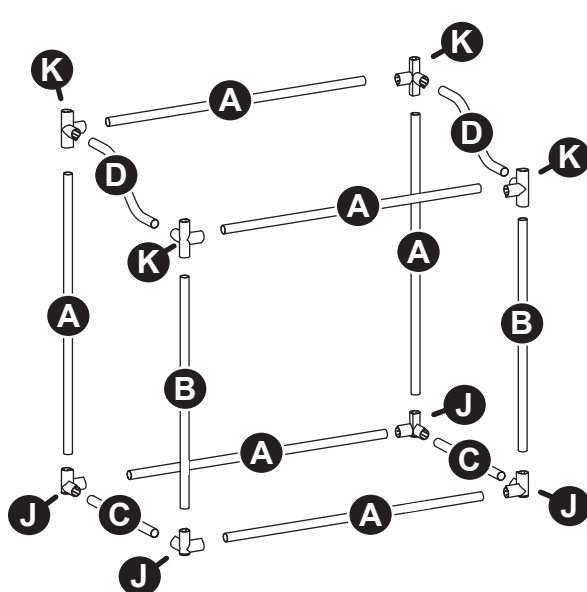



STEP 3. Assemble the top section by inserting hanging pole (I), two remaining long wide poles (A) and five long thin shelf poles (H) into one top shelf connector (L). With all poles assembled into one top shelf connector, insert the other end of poles into the other top shelf connector (L). Place assembled top shelf onto (F & G).

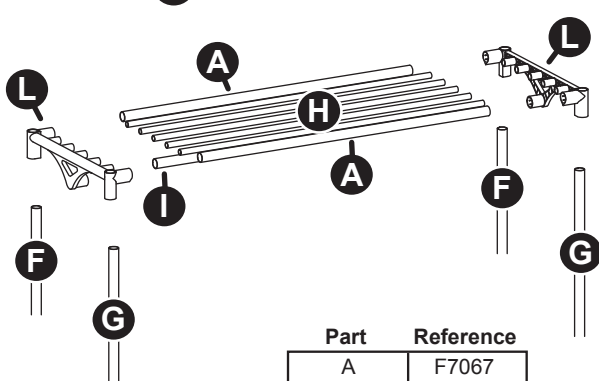

STEP 2. Insert four vertical poles with push buttons (E) into top of part (K) of assembled bottom section. Insert two vertical upper short poles (F) onto back vertical poles with push button (E). Insert two vertical upper long poles (G) onto front poles with push button (E).

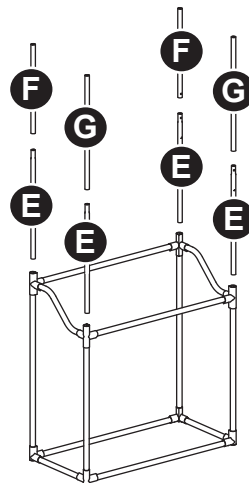

STEP 4. Place bag hangers (O) into laundry bag (P) handles and secure with the velcro. Place hangers onto horizontal poles of assembled laundry center. Finally, insert wheels (M & N) into bottom corner connectors (J). Assembly is now complete.

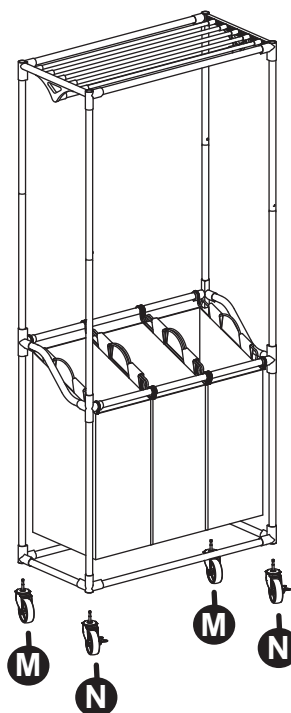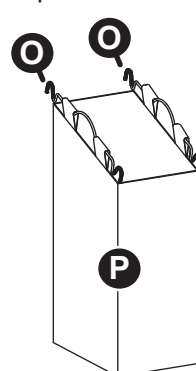

8680 Swinnea Road • Suite 103 • Southaven, MS • 38671

NEED HELP? For help with assembly, or if you are missing a part, please call Whitmor's Customer Service Department, 1-888-944-8667 between 8 a.m. and 4:30 p.m. (Central Standard Time) Monday through Friday. Or email: customer_service@whitmor.com

Part	Reference
A	F7067
B	F7068
C	F7069
D	F7070
E	F7071
F	F7072
G	F7073
H	F7074
I	F7075
J	F7076
K	F7077
L	F7078
M	F7079
N	F7080
O	F7081
P	F7082